

WARRANTY CARD WALMER

MODEL:

SALE DATE:

SELLER'S STAMP:


REPAIR NOTES

Report date Type of fault	Description of service activities	Repair date Stamp and signature

WALMER HANDCUTTERS FOR TILES AND TERRACOTTA INSTRUCTION

CAUTION!!! CHECK AND ADJUST THE CUTTING ANGLE BEFORE USE!!!

BEARING DEVICE

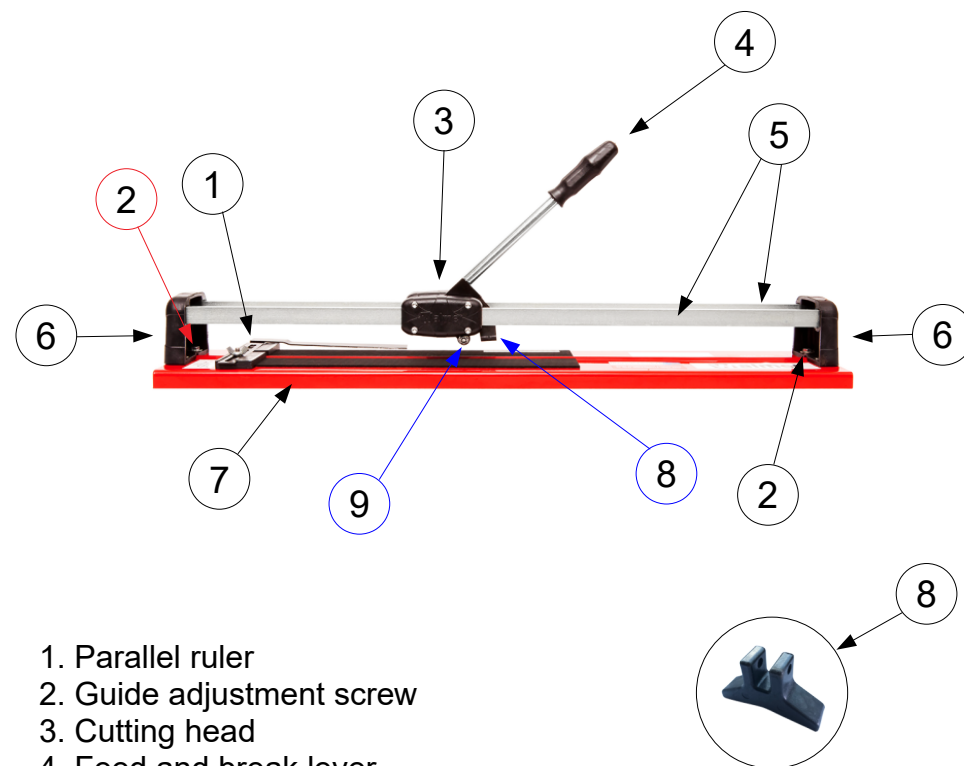

1. Parallel ruler
2. Guide adjustment screw
3. Cutting head
4. Feed and break lever
5. Guide bars
6. Guide bars support
7. Base
8. Breaking foot
9. Cutting wheel Ø16

The original devices have the WALMER logo on the black elements.

The device is NOT INTENDED for cutting wood, metal, glass or plastic.

Always keep your hands away from the cutting blade.

Careless cutting of tiles can cause cuts.

Before starting work, make sure that the cutting blade is properly seated and locked.



OPERATING STEPS:

1. If necessary, remove the screws and adjust the guide bracket.
2. The setting of the guide rail support is important for an even cut angle.
3. Set the ruler for the cut to the selected width.
4. Scratch the surface of the plate with a cutting knife.
5. Break the tile by placing the head only in the indicated place!
6. Do not put your fingers or hands under the cutting head or worktop.

Full service is presented in instructional videos at www.walmer.com.pl

WALTER tile cutters are covered by the manufacturer's warranty under the following conditions:

1. The warranty is granted for the period of:

- 12 months from the date of purchase for professional or comparable professional use,
- 24 months from date of purchase for consumer use.

The warranty period begins at the time of purchase by the first user, the date on the original purchase receipt being decisive.

2. The warranty covers only damage resulting from hidden manufacturing or material defects, provided that:

- the device has been used in accordance with the operating and intended use instructions and properly maintained;
- accessories recommended by the manufacturer were used;
- the device has not been disassembled or modified.

3. The warranty does not cover damage resulting from overloading the tool due to excessive and/or improper use.

4. The warranty does not cover the replacement of naturally wearing parts, including knives, bearings, springs - unless their wear resulted from hidden manufacturing or material defects.

The basis for recognizing the complaint under the warranty is the official WALTER WARRANTY CARD correctly completed by the seller, together with the proof of purchase (invoice or receipt) and the user's legible signature. The warranty card must contain the name and address of the seller (stamp).

Warranty claim

Warranty repairs in Poland are performed only by the Manufacturer. If defects are found, the device together with the above-mentioned documents should be delivered or sent (at the expense and risk of the recipient) to the following address:

WALTER Wola Zdakowska 32B, 39-307 GAWŁUSZOWICE

Repair information:

E-Mail: walmer@walmer.com.pl

fax: (17) 584 00 47

phone.: (17) 584 16 08

service: 723 101 060

Warranty services provided by WALTER do not result in the extension or renewal of the warranty.

User's signature

Without the signature of the guarantee warranty is not granted